

MASTER FINISH

HV44 Handyvibe Maintenance Guide



Nose cap wear is extenuated by dragging the Vibrator through the concrete. To extend your vibrators nose cap life poke the vibrator into the concrete and remove it rather than dragging it.

You can extend the life of the nose cap by drilling three additional evenly spaces holes in the Drive Tube which will allow you to rotate the flexible shaft 90 degrees every few months so that the head wears evenly.



New

Old

DO NOT push your vibrator through the concrete as this **WILL** break the inner flexible shaft. Should the inner core break and need replacing, it is highly likely that the Rubber Casing will be damaged and need replacing as well. When you remove the Rubber Casing be careful not to remove the motor adaptor as well.



Excessive barrel wear will eventually cause concrete and fluid to enter the barrel and seize the internal mechanics. If you notice a significant variation between the diameter of the barrel and the nose cap or see the O-ring appear, it is time to replace the Barrel.

Concrete Tool Importers Ltd

0800 SCREED

0800 727333

76a Oxford St, Richmond, Nelson